


MONTAGEANLEITUNG

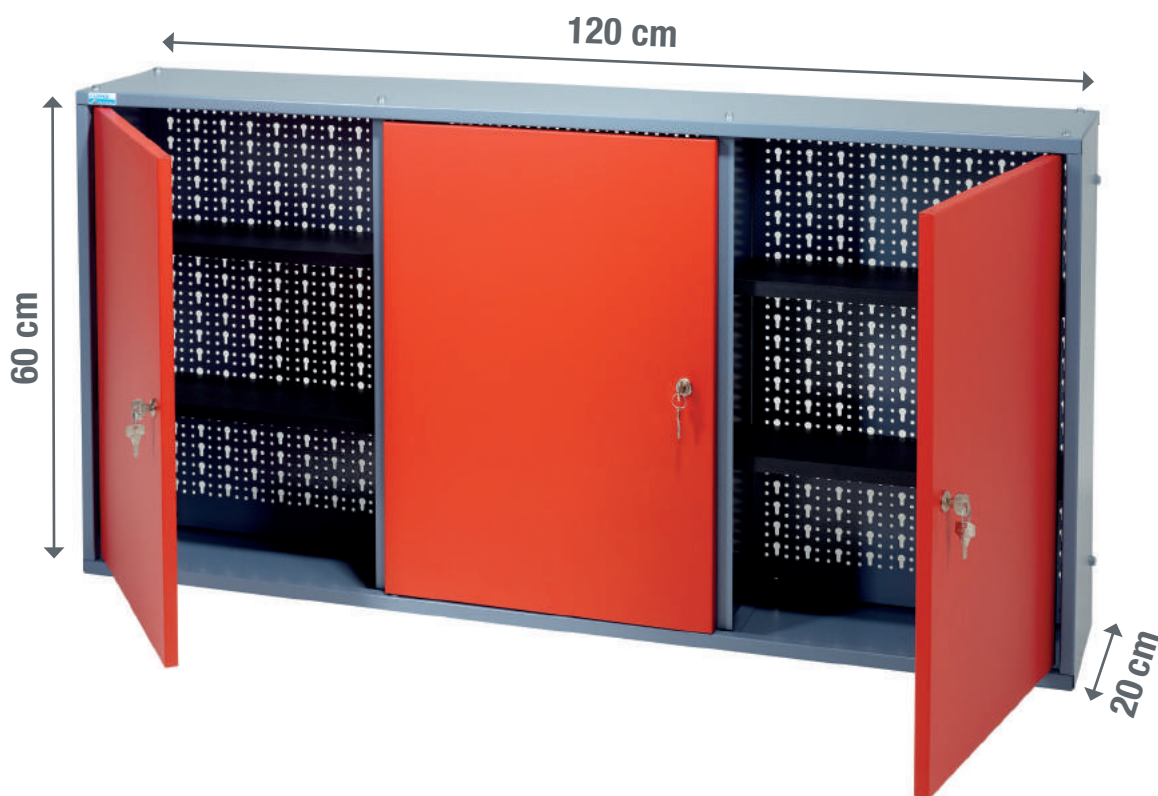

Version 16.6

Modell-Nr.

70090

Friedrich Küpper
Friedrich-Küpper-Weg
54570 Berlingen
Deutschland

Telefon +49 (0) 65 91 - 95 42 0
Telefax +49 (0) 65 91 - 95 42 17
E-Mail info@friedrich-kuepper.de
Internet www.friedrich-kuepper.de

ART.-NR.	FRONT	KORPUS
70092	Rot (ähnl. RAL 3002)	Silber
70097	Ultramarinblau (RAL 5002)	Silber
70096	Silber	Schwarz (RAL 9005)

EINZELTEILE / PIECES

2× **A**



1200 mm × 200 mm

Art.-Nr. E0300 (Silber/silver)
Art.-Nr. E0301 (Schwarz/black)

2× **E**



600 mm × 200 mm

Art.-Nr. E0315 (Silber/silver)
Art.-Nr. E0316 (Schwarz/black)

1× **G**



600 mm × 180 mm

Art.-Nr. E0323 (Silber/silver)
Art.-Nr. E0324 (Schwarz/black)

1× **H**



600 mm × 180 mm

Art.-Nr. E0326 (Silber/silver)
Art.-Nr. E0327 (Schwarz/black)

3× **J**



595 mm × 400 mm

Art.-Nr. E0331 (Silber/silver)

2× **M**



560 mm × 375 mm

Art.-Nr. E0344 (Silber/silver)
Art.-Nr. E0341 (Rot/red)
Art.-Nr. E0343 (Blau/blue)

1× **N**



560 mm × 400 mm

Art.-Nr. E0395 (Silber/silver)
Art.-Nr. E0396 (Rot/red)
Art.-Nr. E0397 (Blau/blue)

4× **P**




393 mm × 138 mm

Art.-Nr. E0365 (Schwarz/black)

BEUTELINHALT / BAG CONTENT



BENÖTIGTES WERKZEUG / NEEDED TOOLS

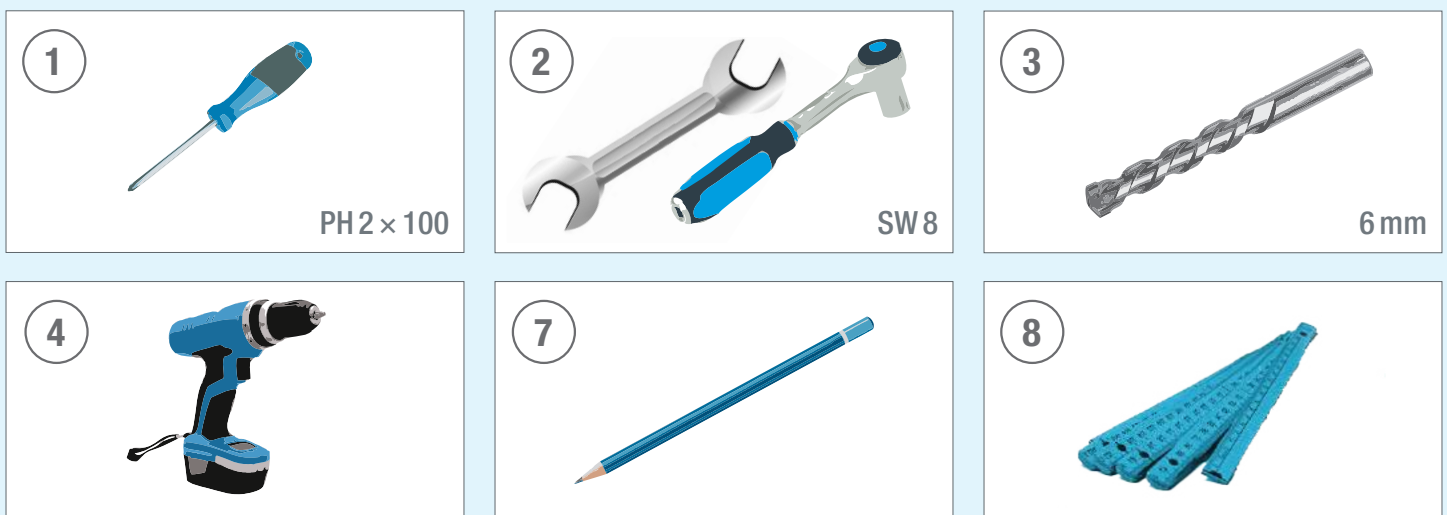

1.



2.


2× M5

2× M5×10

2× 5,3 mm

② SW8

① PH2×100

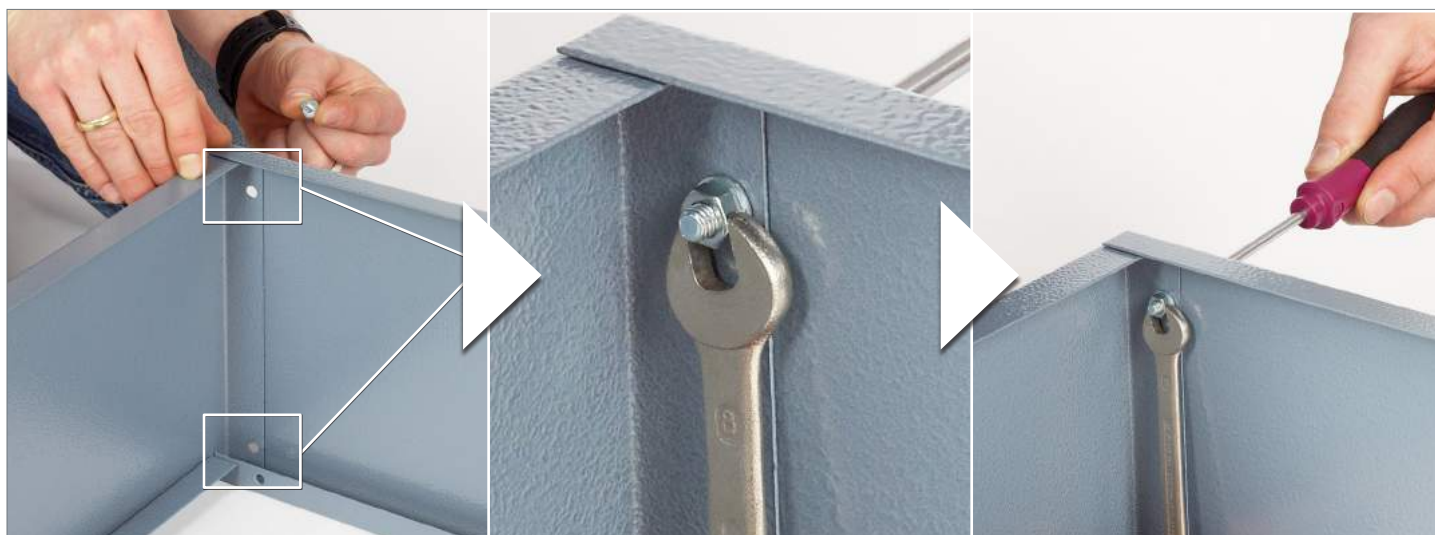

3. 1x M5 1x M5x10 1x 5,3mm

2. SW8 1. PH2x100



4. 1x M5 1x M5x10 1x 5,3mm

2. SW8 1. PH2x100



5. 2x M5 2x M5x10 2x 5,3mm

2. SW8 1. PH2x100



6.




7.




8. 4× M5 4× M5×10 4× 5,3 mm ② SW8 ① PH2×100




9.

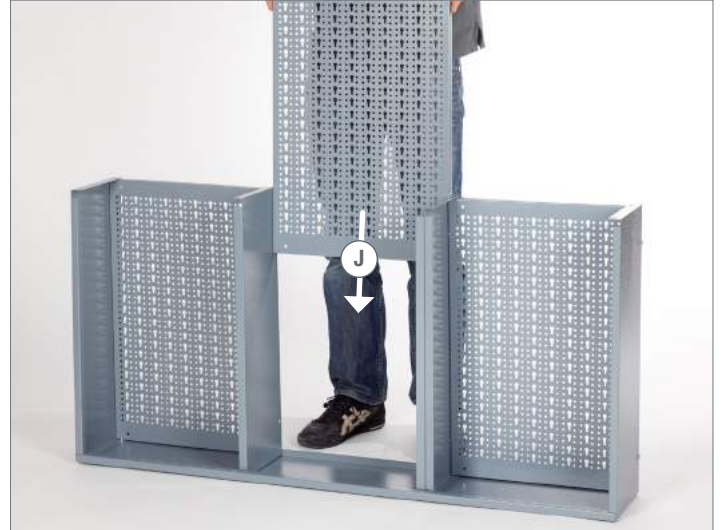


10. 2× M5 2× M5×10 2× 5,3 mm ② SW8 ① PH2×100

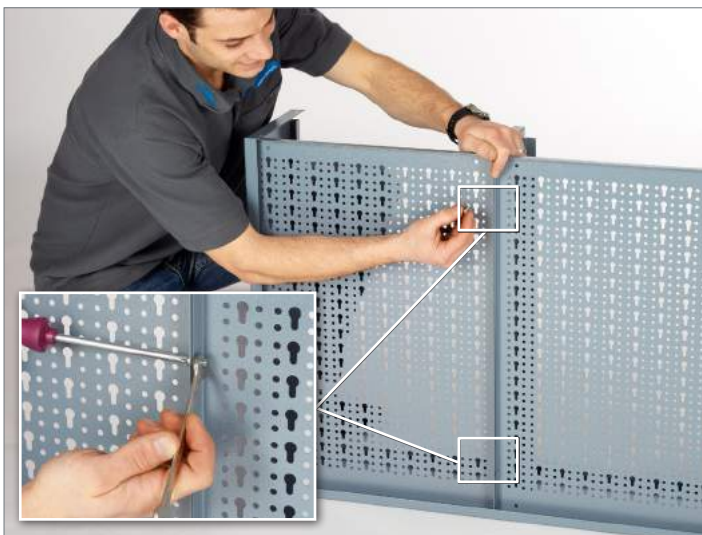

11. 2× M5 2× M5×10 2× 5,3 mm ② SW8 ① PH2×100

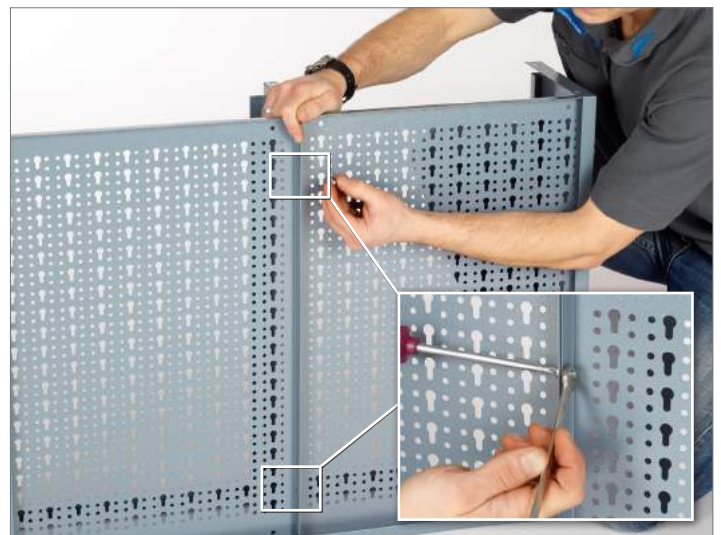

12.

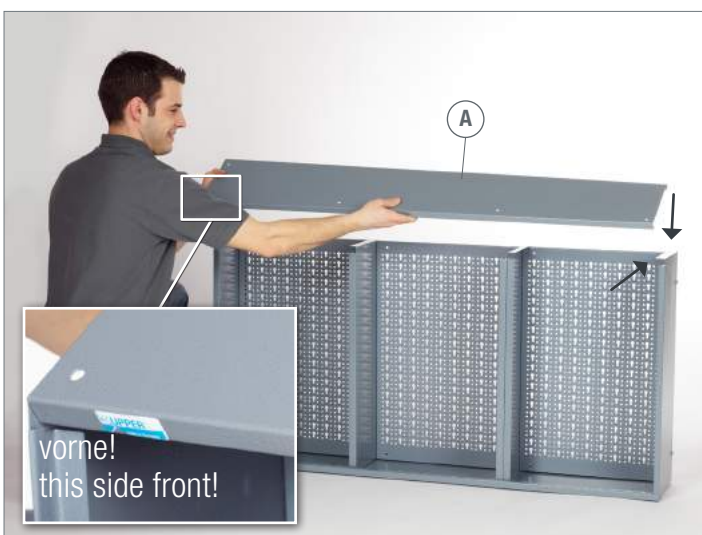

13. 6× M5 6× M5×10 6× 5,3 mm ② SW8 ① PH2×100





15.  6x



16.



17.



18.



3×




3×



19.



A.

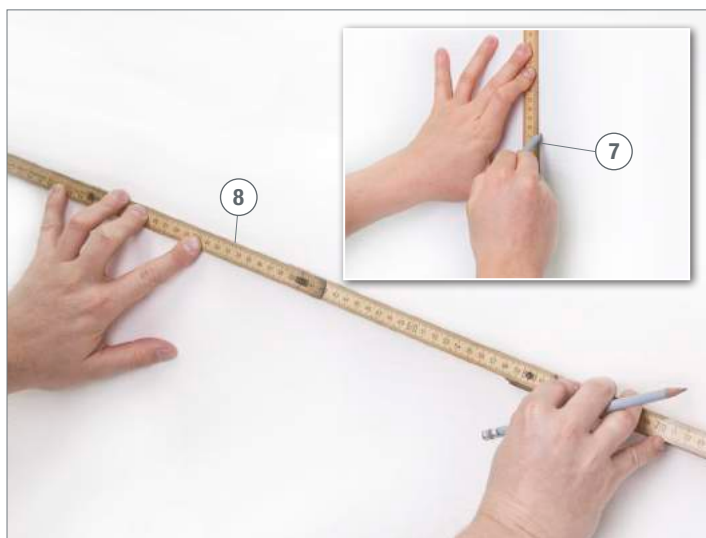


B.




6 mm



C.



4x 4,5 x 60 4x 15 x 15

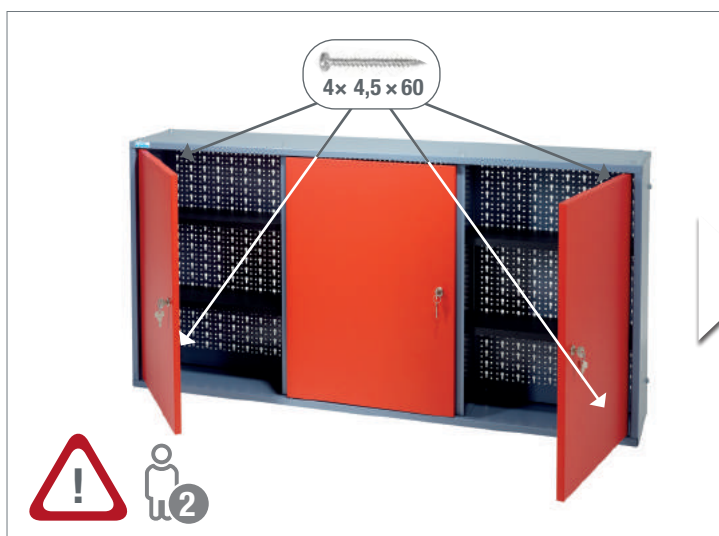

Modell-Nr.

70090